

If your TV screen should go blank, try pressing the **||** (pause) button on the front panel of the unit continuously for 5 seconds or more.

You can enjoy high resolution progressive signals if you have connected a progressive format TV to the DVD-VCR's COMPONENT VIDEO OUT jacks (red/green/blue) using a component video cord.

If you do not connect a progressive format TV but set the "Progressive" setting in the Screen Setup Menu, the images on your TV screen may become unclear or unnatural. In this case, the "Progressive" setting can be canceled by pressing SELECT DVD and then press **||** (pause) button on the front panel of the unit continuously for 5 seconds or more. For details, see "**B** Use this hookup if your TV has component video input jacks" on page 31 or "To set the "Progressive" setting" on page 58.